




HTC Wizard 200 Keyboard Slider Replacement

Installation of the Keyboard Slider on the HTC Wizard 200.

Written By: Kyle Champ

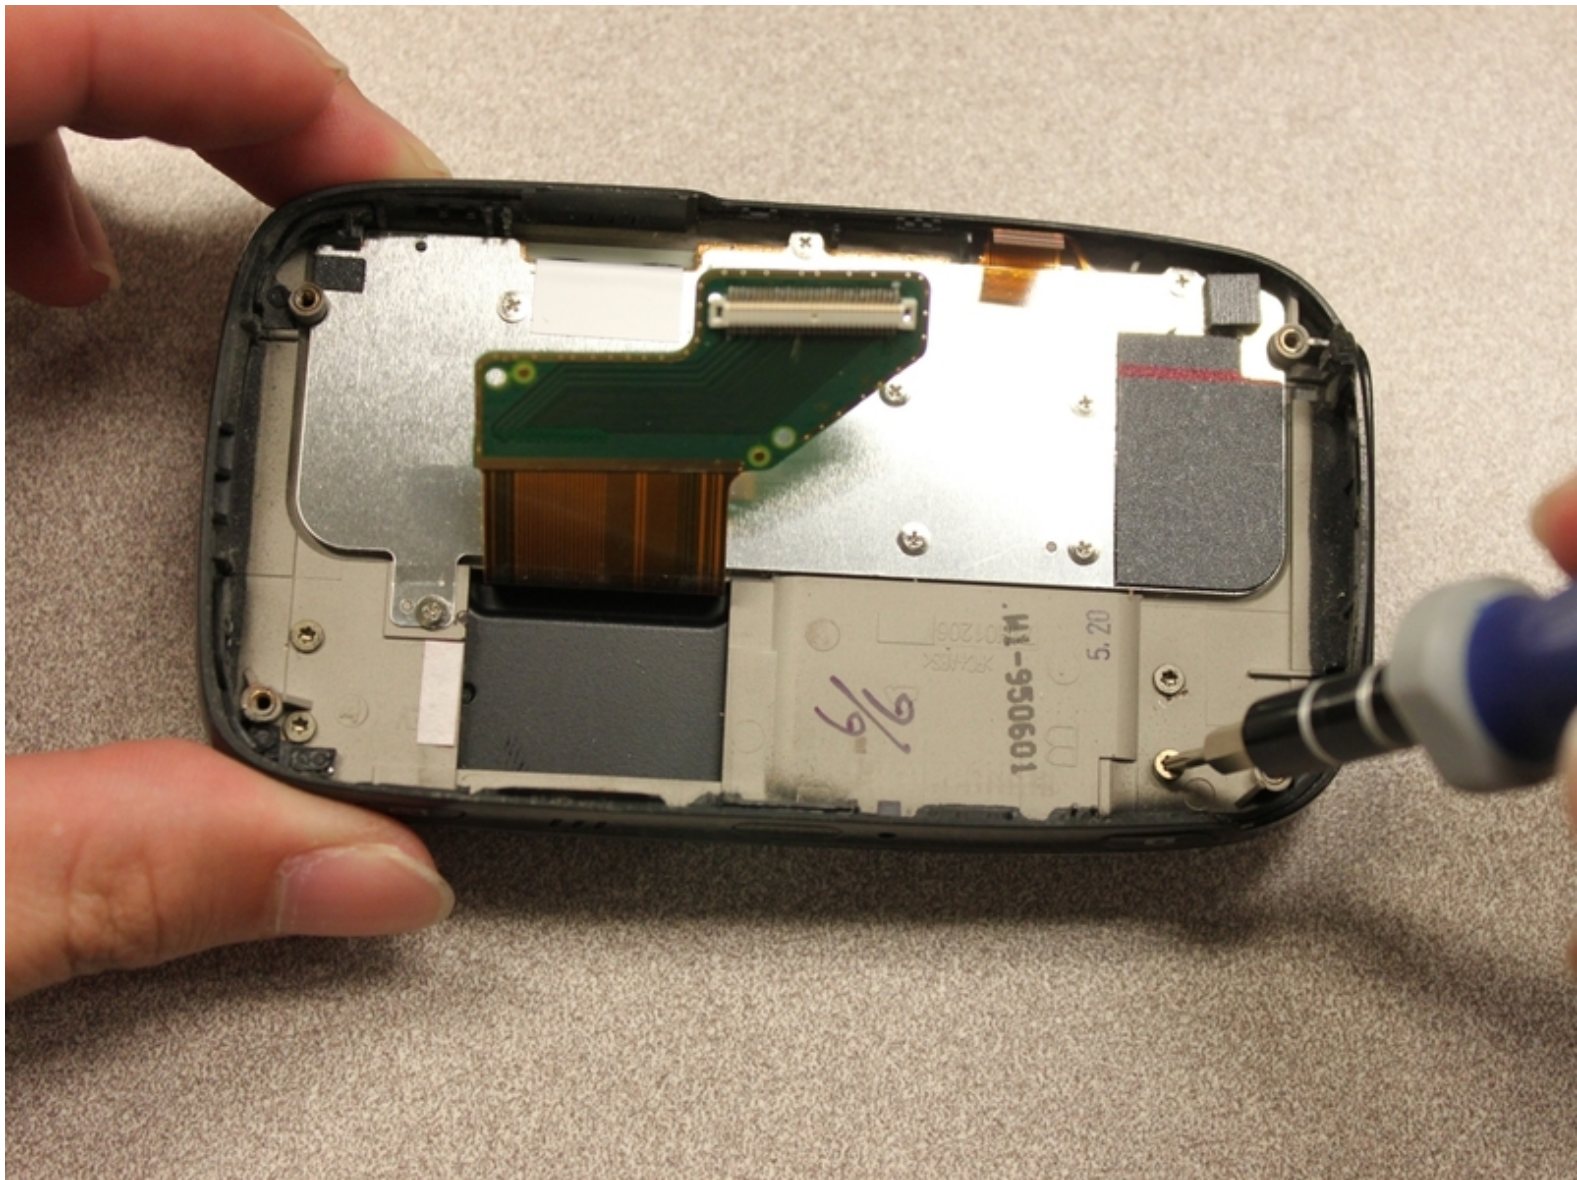

INTRODUCTION

This guide will explain how to install / remove the keyboard slider on the HTC Wizard 200.

TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
 - [T5 Torx Screwdriver](#) (1)
-

Step 1 — Battery



- Remove the back case with your fingernail to expose the battery. (Not shown in picture)
- Pull the black tab to remove the battery.

Step 2 — Back Panel

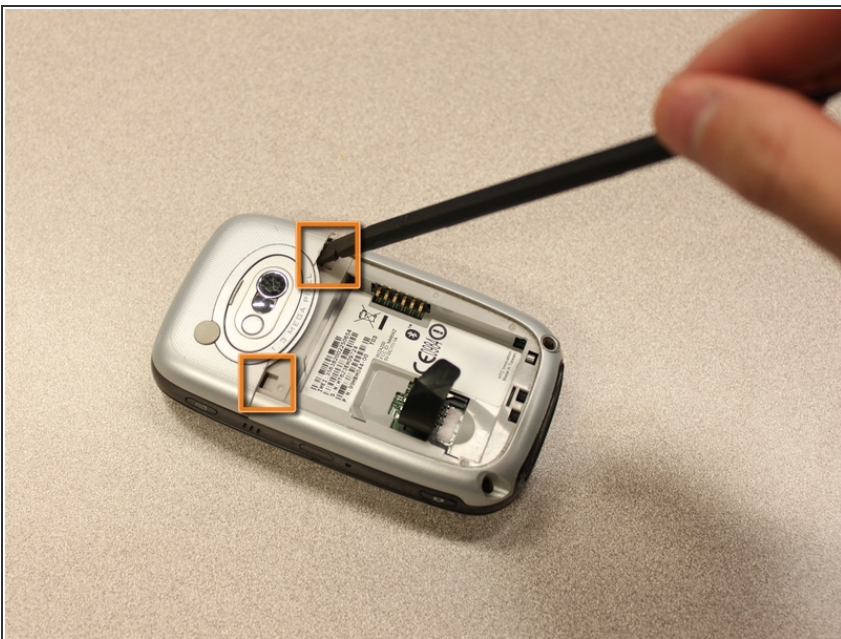


- Use a spudger to begin removal of the camera cover by inserting the flat end into the two notches and gently pry them up one at a time.

Step 3



- Work the spudger around the edge of the camera cover to release the clips.

Step 4

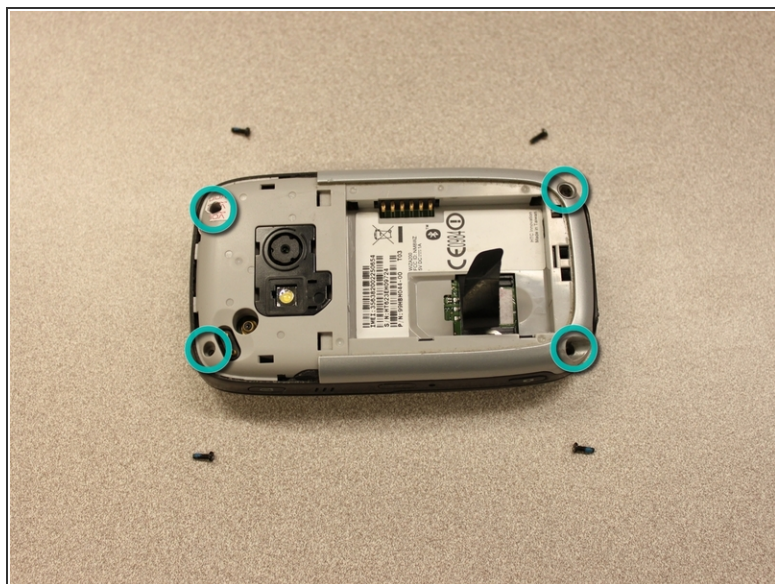

- Use a [T5 Torx screwdriver](#) to remove four 6mm screws that secure the back panel to the main body.

i There is a screw under the "void" sticker.


Step 5



i Device rotated 180 degrees.


- Insert the flat end of a spudger into the crack between the front and rear cover.
- Once you have enough of a gap to fit a plastic opening tool into it, use the opening tool to release the clips.

Step 6

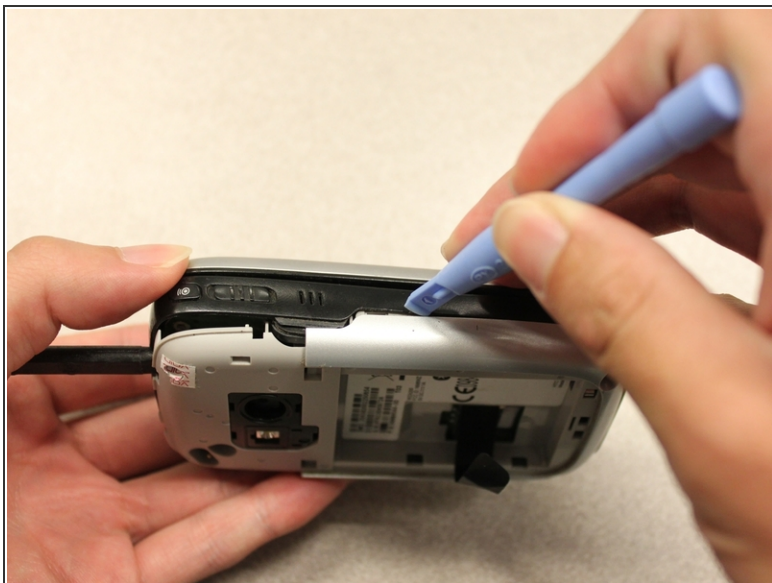

- Use the plastic opening tool to continue releasing the clips until you have worked your way around the edge.

Step 7

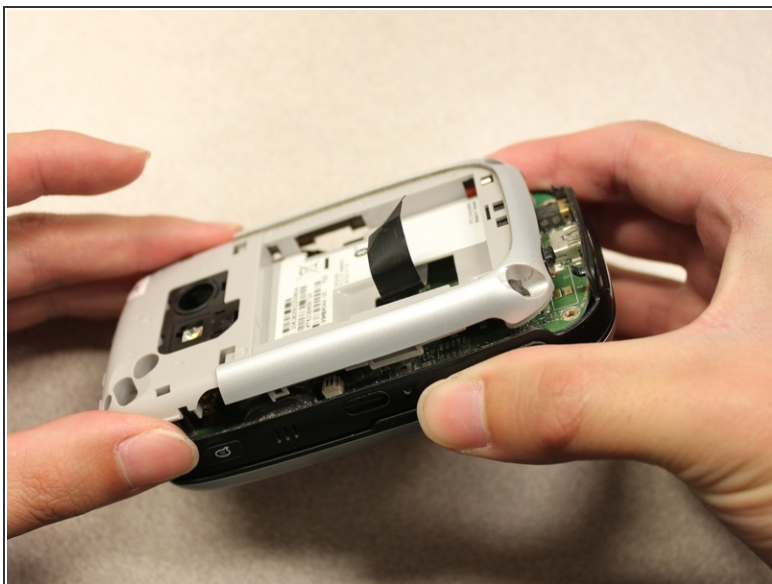




- Pull off the back case panel.

Step 8 — Motherboard



- ⓘ Device rotated 180 degrees.
- Use the spudger to pry off the camera.

Step 9

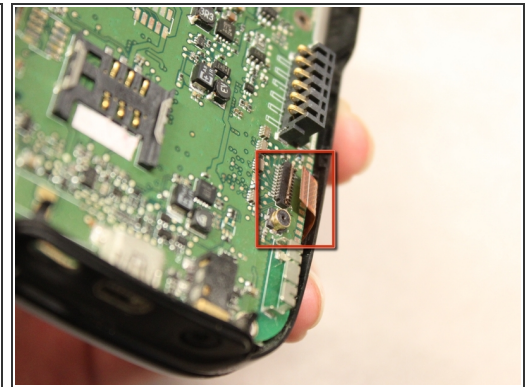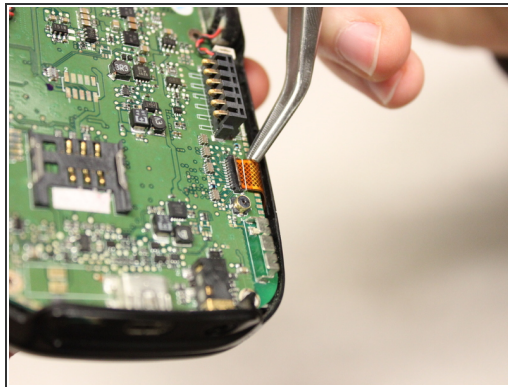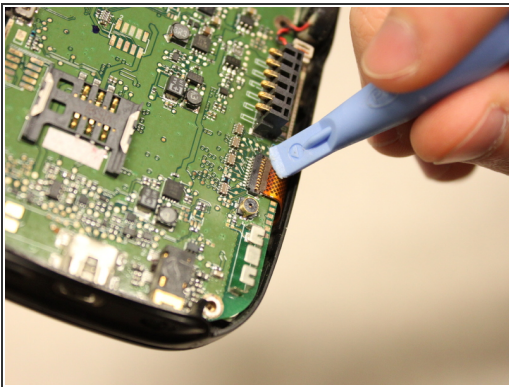

- ⓘ Device rotated 90 degrees CCW.
- ⓘ You may need to remove a strip of orange anti-static tape (not pictured).
- Flip up the connector latch.
- Use the tweezers to detach the flexible connection.

Step 10




- ❗ Device rotated 90 degrees CW.
- Slide the screen slider into the open position.

Step 11




- Use the spudger to push out the motherboard.


Step 12

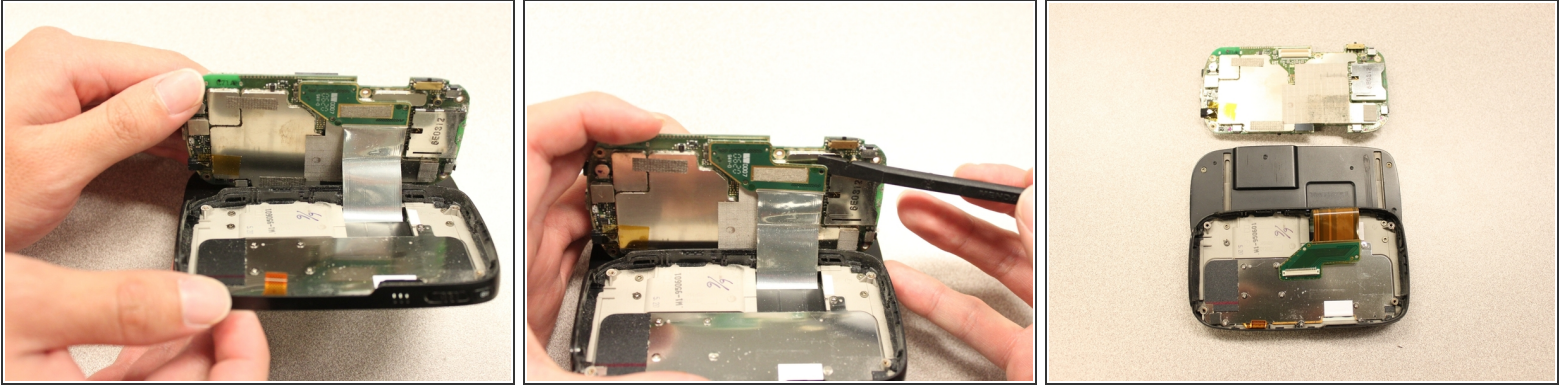


- Use your hands to gently expose the underside of the motherboard.
- Use the spudger to pull off the flexible connection.

 Be careful not to pull apart the motherboard connection quickly, as the connection and cables could be damaged.

Step 13 — Keyboard Slider

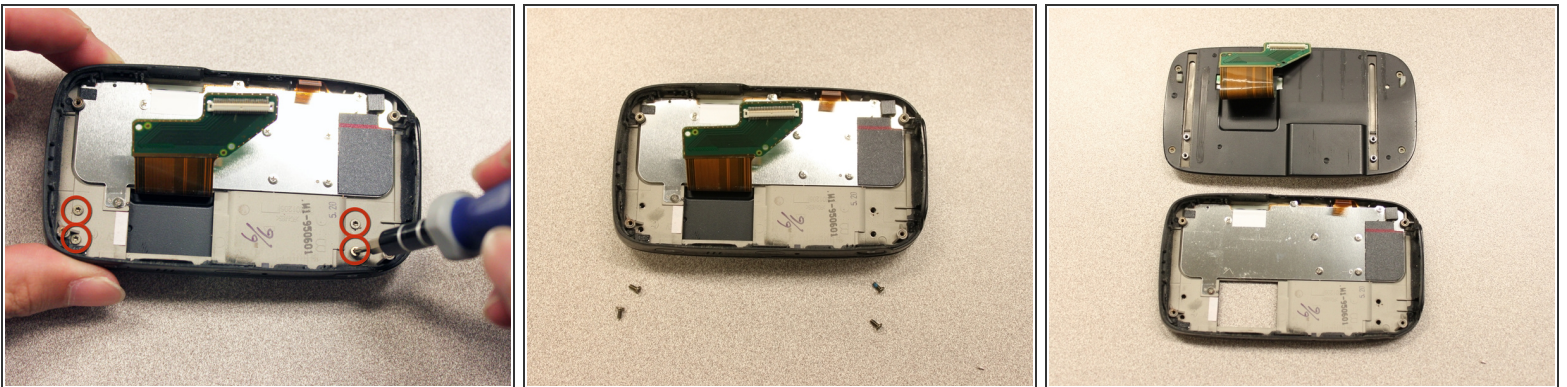

 Device rotated 180 degrees CW.

- Use the T5 Torx screwdriver to remove four 5mm screws that secure the keyboard slider to the main body.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-30 01:03:11 AM.